



Innovation in Mobility

***KlearVue
K-Series
Folding Platform
Personal and Transit Use
Wheelchair Lift***

SERVICE MANUAL

**THIS RICON PRODUCT MUST BE INSTALLED
AND SERVICED BY AUTHORIZED RICON
SERVICE TECHNICIANS.**

**AUTHORIZED RICON SERVICE TECHNICIANS
MUST REFER TO THIS MANUAL FOR REPAIR
INFORMATION AND MAINTENANCE
INSTRUCTIONS.**

Customer Name: _____

Installing Dealer: _____

Date Installed: _____

Serial Number: _____

Revision Record

REV	DATE	PAGES	DESCRIPTION OF CHANGE	ECR/ECO
32DSS10 2.A	06/29/00	All	Initial Release.	N/A

TABLE OF CONTENTS

<i>Chapter</i>	<i>Page</i>
I. INTRODUCTION	1-1
WARRANTY INFORMATION.....	1-2
SERVICE TECHNICIAN INFORMATION.....	1-3
GENERAL SAFETY PRECAUTIONS.....	1-3
PRODUCT TERMINOLOGY	1-4
II. INSTALLATION.....	2-1
A. MECHANICAL INSTALLATION	2-1
1. LIFT LOCATION.....	2-1
2. LIFT INSTALLATION GUIDELINES.....	2-1
3. LIFT INSTALLATION INTO VANS	2-2
4. LIFT INSTALLATION INTO BUSES.....	2-4
B. ELECTRICAL INSTALLATION	2-6
1. INSTALL MAIN CIRCUIT BREAKER	2-7
2. ROUTE/CONNECT MAIN POWER CABLE.....	2-7
3. GROUNDING INSTRUCTIONS	2-9
4. RICON UNSUPPORTED INTERLOCK DEVICE INSTALLATION.....	2-10
C. FINAL ADJUSTMENTS	2-14
1. LIMIT SWITCH ADJUSTMENTS	2-14
2. ROLLSTOP (PLATFORM TILT) ADJUSTMENT.....	2-16
3. PLATFORM PRESSURE SWITCH CHECK AND ADJUSTMENT (S/N'S 104,000 TO PRESENT).....	2-17
D. VERIFY INSTALLATION.....	2-19
E. CUSTOMER ORIENTATION	2-19
III. MAINTENANCE AND REPAIR	3-1
A. LUBRICATION	3-1
B. CLEANING	3-2
C. MAINTENANCE SCHEDULE.....	3-2
D. TROUBLESHOOTING	3-4
1. INTERLOCK INDICATOR DIAGNOSTICS	3-4
2. LIFT TROUBLESHOOTING.....	3-5
E. HYDRAULIC CIRCUIT DIAGRAM	3-6
F. ELECTRICAL WIRING DIAGRAMS	3-7
1. DIAGRAM LEGEND	3-7
2. K-SERIES LIMIT SWITCH STATES	3-8
3. WIRING DIAGRAMS	3-9
IV. SPARE PARTS LIST.....	4-1
APPENDIX 1.....	4-12

LIST OF FIGURES

1-1	LIFT REFERENCE	1-4
2-1	PLATFORM MOUNTING.....	2-1
2-2	FORD VAN CLAMPING BAR ARRANGEMENT	2-2
2-3	STEPWELL BRACKET	2-2
2-4	BRACKET ASSEMBLY.....	2-3
2-5	VAN BASEPLATE HOLES	2-3
2-6	TOP BRACKET HOLES	2-4
2-7	BUS CLAMPING BAR ARRANGEMENT	2-5

2-8	BUS BASEPLATE HOLES.....	2-5
2-9	ELECTRICAL INSTALLATION DIAGRAM.....	2-6
2-10	POWER CABLE ACCESS HOLE	2-7
2-11	CABLE ROUTING	2-8
2-12	CONTROL INTERFACE AND STRAIN RELIEF.....	2-9
2-13	24VDC WIRING	2-10
2-14	INTERLOCK METHOD #1 DIAGRAM	2-13
2-15	INTERLOCK METHOD #2 DIAGRAM	2-13
2-16	INTERLOCK METHOD #3 DIAGRAM	2-14
2-17	LIMIT SWITCH ADJUSTMENT DIAGRAM.....	2-14
2-18	LIMIT SWITCH ADJUSTMENT CLEARANCE	2-15
2-19	PLATFORM SET SCREWS.....	2-17
2-20	PRESSURE SWITCH TEST AT FLOOR LEVEL.....	2-17
2-21	HYDRAULIC PUMP WITH PRESSURE SWITCH.....	2-18
2-22	DECAL LOCATIONS AND PART NUMBERS	2-20
3-1	LIFT LUBRICATION POINTS	3-1
3-2	K-SERIES HYDRAULIC CIRCUIT DIAGRAM	3-6
3-3	MOLEX CONNECTORS	3-7
3-4	DIAGRAM LABEL CHART	3-7
3-5	ELECTRICAL WIRING DIAGRAM SYMBOLS	3-8
3-6	LIMIT SWITCH ACTUATION DIAGRAM.....	3-8
3-7	WIRING DIAGRAM FOR LIFT W/DOOR OPERATOR	3-9
3-8	WIRING DIAGRAM FOR LIFT W/O DOOR OPERATOR	3-10
4-1	MONARCH HYDRAULIC POWER UNIT #1.....	4-2
4-2	HYDRAULIC SYSTEM.....	4-4
4-3	ELECTRICAL SYSTEM	4-6
4-4	PENDANT	4-8
4-5	K-LIFT FOLDING PLATFORM ASSEMBLY, 1200	4-10
4-6	K-LIFT FOLDING PLATFORM ASSEMBLY, 2003 & 2005.....	4-12
4-7	TRAVELING FRAME	4-14
4-8	K-1200 HANDRAIL ASSEMBLY	4-18
4-9	K-2005 (ADA) HANDRAIL ASSEMBLY	4-20

LIST OF TABLES

1-1	K-1200 SERIES LIFT TERMINOLOGY	1-5
2-1	LIMIT SWITCH ADJUSTMENT CHART	2-16
3-1	MAINTENANCE SCHEDULE.....	3-2
3-2	INTERLOCK INDICATOR TROUBLESHOOTING GUIDE	3-4
3-3	LIFT OPERATIONAL TROUBLESHOOTING GUIDE	3-5
3-4	WIRE COLOR CODES	3-7