



*Innovation in Mobility*

**S-Series™**

***Transit Use (ADA)***

***Wheelchair and Standee Lift  
with Manual or Automatic Rollstop***

## **Service/Owner Manual**

(Owner Retains after Installation by an Authorized RICON Service Technician)

09/07/00

32DSSM0.L

©1992-00 RICON CORP.

U.S. Patent Nos: 5,228,538; 5,308,215; 5,373,915; 5,308,215; 5,445,488; 5,605,431; 5,944,473;  
Australian Patent Nos: 661127; 687066 Canadian Patent Nos: 2,129,821; 2,168,761;  
German Patent No: EP 0625896 B1 U.K. Patent No: EP 0625896 B1  
Other U.S. and foreign patents pending.

**All Rights Reserved**  
**Printed in the**  
**United States of America**

32DSSM0.L

**This RICON product must be installed and serviced by authorized RICON service technicians.**

**The authorized RICON service technician must refer to this manual for installation instructions.**

**The owner must refer to this manual for operating instructions, then retain it for future reference by authorized RICON service technicians who perform service and repairs.**

|                         |
|-------------------------|
| Customer Name:_____     |
| Installing Dealer:_____ |
| Date Installed:_____    |
| Serial Number:_____     |

## REVISION RECORD

| REV                        | PAGE        | DESCRIPTION OF CHANGE   | ECR / ECO |
|----------------------------|-------------|---|-----------|
| 32DSSSM0.<br>L<br>XX/XX/00 | 5-15        | Part number 25382 is replaced with 17901.   | 3166/     |
|                            | 5-16,19     | Deleted pins 14322 and VT-PI-44, plus ring 14-31-075; added note **** for pin kit 16679.    | 4487      |
|                            | 4-3, 5      | Changed hydraulic oil to Texaco 01554.  | 3215      |
|                            | 4-9, 10     | Wiring diagrams redrawn to show second motor solenoid.                                      | 3343/4567 |
|                            | front cover | Added "Automatic" to description.   | NA/4567   |
|                            | 5-16 & 5-17 | Added S-Series Solid Platform with automatic rollstop drawing and corresponding parts list. | 4567      |
| <b>END OF LIST</b>         |             |   |           |

|  |             |
|--|-------------|
| <b>I. INTRODUCTION</b> .....                           | <b>1-1</b>  |
| RICON 5-YEAR LIMITED WARRANTY .....                    | 1-2         |
| SHIPMENT INFORMATION .....                             | 1-3         |
| GENERAL SAFETY PRECAUTIONS .....                       | 1-3         |
| MAJOR LIFT COMPONENTS .....                            | 1-4         |
| <b>II. INSTALLATION</b> .....                          | <b>2-1</b>  |
| <b>A. MECHANICAL INSTALLATION</b> .....                | <b>2-1</b>  |
| 1. LIFT LOCATION .....                                 | 2-1         |
| 2. LIFT INSTALLATION GUIDELINES .....                  | 2-1         |
| 3. LIFT INSTALLATION INTO VANS .....                   | 2-2         |
| 4. LIFT INSTALLATION INTO BUSES .....                  | 2-4         |
| <b>B. ELECTRICAL INSTALLATION</b> .....                | <b>2-6</b>  |
| 1. INSTALL MAIN CIRCUIT BREAKER .....                  | 2-6         |
| 2. ROUTE AND CONNECT MAIN POWER CABLE .....            | 2-7         |
| 3. GROUNDING INSTRUCTIONS .....                        | 2-9         |
| a. 12VDC Systems .....                                 | 2-9         |
| b. 24VDC Systems .....                                 | 2-9         |
| 4. NON-RICON INTERLOCK DEVICE INSTALLATION .....       | 2-9         |
| a. Interlock Method #1 .....                           | 2-10        |
| b. Interlock Method #2 .....                           | 2-10        |
| c. Interlock Method #3 .....                           | 2-11        |
| <b>C. FINAL ADJUSTMENTS</b> .....                      | <b>2-15</b> |
| 1. LIMIT SWITCH ADJUSTMENT .....                       | 2-15        |
| 2. ROLLSTOP (PLATFORM TILT) ADJUSTMENT .....           | 2-17        |
| 3. PLATFORM PRESSURE SWITCH CHECK AND ADJUSTMENT ..... | 2-17        |
| 4. PLATFORM LOAD SENSOR SWITCH ADJUSTMENT .....        | 2-18        |
| <b>D. VERIFY INSTALLATION</b> .....                    | <b>2-19</b> |
| <b>E. CUSTOMER ORIENTATION</b> .....                   | <b>2-19</b> |

|   |            |
|---|------------|
| <b>III. OPERATING INSTRUCTIONS</b>            | <b>3-1</b> |
| A. SAFETY PRECAUTIONS                         | 3-1        |
| B. DAILY SAFETY CHECK                         | 3-2        |
| C. LIFT FUNCTIONS                             | 3-3        |
| D. CONTROLS AND INDICATORS                    | 3-4        |
| 1. CONTROL PENDANT                            | 3-4        |
| 2. ELECTRICAL CONTROLS AND INDICATORS         | 3-4        |
| a. Interlock Indicator Light                  | 3-4        |
| b. Circuit Breaker for Optional Door Operator | 3-5        |
| c. Control System Circuit Breaker             | 3-5        |
| d. Main Circuit Breaker                       | 3-5        |
| 3. MANUAL BACKUP PUMP                         | 3-5        |
| E. LIFT OPERATION                             | 3-6        |
| 1. ENTERING VEHICLE                           | 3-7        |
| 2. EXITING VEHICLE                            | 3-7        |
| 3. STOWING PLATFORM                           | 3-8        |
| 4. MANUAL OPERATION                           | 3-8        |
| a. Deploy Platform                            | 3-9        |
| b. Lower Platform                             | 3-9        |
| c. Raise Platform                             | 3-10       |
| b. Stow Platform                              | 3-10       |
| F. MAINTENANCE AND REPAIR                     | 3-10       |
| <b>IV. MAINTENANCE AND REPAIR</b>             | <b>4-1</b> |
| A. LUBRICATION                                | 4-1        |
| B. CLEANING                                   | 4-2        |
| C. MAINTENANCE SCHEDULE                       | 4-2        |
| D. TROUBLESHOOTING                            | 4-4        |
| 1. INTERLOCK INDICATOR DIAGNOSTICS            | 4-4        |
| 2. LIFT TROUBLESHOOTING                       | 4-5        |
| E. HYDRAULIC CIRCUIT DIAGRAM                  | 4-6        |

|  |             |
|--|-------------|
| <b>F. ELECTRICAL WIRING DIAGRAMS</b> .....               | <b>4-7</b>  |
| <b>1. DIAGRAM LEGEND</b> .....                           | <b>4-7</b>  |
| a. Wire Color Codes .....                                | 4-7         |
| b. Electrical Connectors Description .....               | 4-7         |
| c. Diagram Label Definitions .....                       | 4-7         |
| d. Electrical Symbols .....                              | 4-8         |
| <b>2. S-SERIES™ LIMIT SWITCH STATE DESCRIPTION</b> ..... | <b>4-8</b>  |
| <b>3. WIRING DIAGRAMS</b> .....                          | <b>4-9</b>  |
| <b>V. PARTS DIAGRAMS AND LISTS</b> .....                 | <b>5-1</b>  |
| <b>APPENDIX 1. LIFT SPECIFICATIONS</b> .....             | <b>5-24</b> |

**LIST OF FIGURES****PAGE**

|  |      |
|--|------|
| FIGURE [1-1]: TRANSIT USE (ADA) WHEELCHAIR AND STANDEE LIFT W/ MANUAL ROLLSTOP ..... | 1-4  |
| FIGURE [2-1]: PLATFORM MOUNTING .....  | 2-1  |
| FIGURE [2-2]: FORD VAN CLAMPING BAR .....  | 2-2  |
| FIGURE [2-3]: STEPWELL BRACKET .....   | 2-2  |
| FIGURE [2-4]: BRACKET ASSEMBLY .....   | 2-3  |
| FIGURE [2-5]: VAN BASEPLATE HOLES .....  | 2-3  |
| FIGURE [2-6]: TOP BRACKET HOLE LOCATIONS .....                                       | 2-3  |
| FIGURE [2-7]: BUS CLAMPING BAR .....   | 2-5  |
| FIGURE [2-8]: BUS BASEPLATE HOLES .....  | 2-5  |
| FIGURE [2-9]: ELECTRICAL INSTALLATION DIAGRAM .....                                  | 2-6  |
| FIGURE [2-10]: POWER CABLE ACCESS HOLE .....   | 2-7  |
| FIGURE [2-11]: CABLE ROUTING .....   | 2-8  |
| FIGURE [2-12]: CONTROL INTERFACE AND STRAIN RELIEF KIT .....                         | 2-8  |
| FIGURE [2-13]: 24VDC WIRING .....  | 2-9  |
| FIGURE [2-14]: INTERLOCK METHOD #1 DIAGRAM .....                                     | 2-12 |
| FIGURE [2-15]: INTERLOCK METHOD #2 DIAGRAM .....                                     | 2-13 |
| FIGURE [2-16]: INTERLOCK METHOD #3 DIAGRAM .....                                     | 2-14 |
| FIGURE [2-17]: LIMIT SWITCH ADJUSTMENT DIAGRAM .....                                 | 2-15 |
| FIGURE [2-18]: LIMIT SWITCH ADJUSTMENT CLEARANCE .....                               | 2-15 |
| FIGURE [2-19]: PLATFORM SET SCREWS .....   | 2-17 |
| FIGURE [2-20]: PRESSURE SWITCH TEST AT FLOOR LEVEL .....                             | 2-17 |
| FIGURE [2-21]: HYDRAULIC PUMP WITH PRESSURE SWITCH .....                             | 2-18 |
| FIGURE [2-22]: LOAD SENSOR ADJUSTMENT .....  | 2-18 |
| FIGURE [2-23]: DECAL LOCATIONS AND PART NUMBERS .....                                | 2-20 |
| FIGURE [3-1]: DO NOT DEPLOY LIFT WHEN VEHICLE IS ON SLOPED GROUND .....              | 3-1  |
| FIGURE [3-2]: FACE OUTWARD .....   | 3-1  |
| FIGURE [3-3]: STAND CLEAR OF LIFT .....  | 3-2  |
| FIGURE [3-4]: PLATFORM POSITIONS .....   | 3-3  |

|  |      |
|--|------|
| FIGURE [3-5]: CONTROL PENDANT .....                                  | 3-4  |
| FIGURE [3-6]: ELECTRICAL CONTROLS AND INDICATORS .....               | 3-4  |
| FIGURE [3-7]: MAIN CIRCUIT BREAKER .....                             | 3-5  |
| FIGURE [3-8]: MANUAL BACKUP PUMP & HANDLE .....                      | 3-5  |
| FIGURE [3-9]: MANUAL ROLLSTOP OPERATION .....                        | 3-6  |
| FIGURE [3-10]: MANUAL OPERATION .....                                | 3-8  |
| FIGURE [3-11]: MANUAL BACK-UP PUMP - DEPLOY AND LOWER PLATFORM ..... | 3-9  |
| FIGURE [3-12]: MANUAL BACK-UP PUMP - RAISE PLATFORM .....            | 3-10 |
| FIGURE [4-1]: LIFT LUBRICATION POINTS .....                          | 4-1  |
| FIGURE [4-2]: S-SERIES HYDRAULIC CIRCUIT DIAGRAM .....               | 4-6  |
| FIGURE [4-3]: MOLEX CONNECTORS .....                                 | 4-7  |
| FIGURE [4-4]: DIAGRAM SYMBOLS .....                                  | 4-8  |
| FIGURE [4-5]: LIMIT SWITCH ACTUATION DIAGRAM .....                   | 4-8  |
| FIGURE [4-6]: WIRING DIAGRAM FOR LIFT W/O DOOR OPERATOR .....        | 4-9  |
| FIGURE [4-7]: WIRING DIAGRAM FOR LIFT W/ DOOR OPERATOR .....         | 4-10 |
| FIGURE [5-1]: MONARCH HYDRAULIC POWER UNIT #1 .....                  | 5-2  |
| FIGURE [5-2]: MONARCH HYDRAULIC POWER UNIT #2 .....                  | 5-6  |
| FIGURE [5-3]: S-SERIES™ HYDRAULIC SYSTEM .....                       | 5-8  |
| FIGURE [5-4]: S-SERIES™ ELECTRICAL SYSTEM .....                      | 5-10 |
| FIGURE [5-5]: S-SERIES™ PENDANT .....                                | 5-12 |
| FIGURE [5-6]: S-SERIES™ SOLID PLATFORM .....                         | 5-14 |
| FIGURE [5-7]: S-SERIES™ SOLID PLATFORM WITH AUTOMATIC ROLLSTOP ..... | 5-16 |
| FIGURE [5-8]: S-SERIES™ TRAVELING FRAME .....                        | 5-18 |
| FIGURE [5-9]: S-2006 STANDEE HANDRAIL .....                          | 5-22 |



**LIST OF TABLES****PAGE**

---

|  |      |
|--|------|
| TABLE [1-1]: S-SERIES LIFT TERMINOLOGY .....                 | 1-5  |
| TABLE [2-1]: LIMIT SWITCH ADJUSTMENT CHART .....             | 2-16 |
| TABLE [3-1]: LIFT FUNCTIONS .....                            | 3-3  |
| TABLE [4-1]: MAINTENANCE SCHEDULE .....                      | 4-2  |
| TABLE [4-2]: INTERLOCK INDICATOR TROUBLESHOOTING GUIDE ..... | 4-4  |
| TABLE [4-3]: LIFT OPERATIONAL TROUBLESHOOTING GUIDE .....    | 4-5  |
| TABLE [4-4]: WIRE COLOR CODES .....                          | 4-7  |

-Go to next chapter-