



Innovation in Mobility

S-Series™
Transit Use
Wheelchair Lift

Service/Owner Manual

(To be Retained by Owner After Installation by Authorized RICON Service Agent)

09/07/00

32DSST00.J

U.S. Patent Nos: 5,228,538; 5,373,915; 5,308,215; 5,445,488; 5,605,431; 5,944,473; Re.31,178
Australian Patent Nos: 661127; 687066 Canadian Patent No: 2,129,821
German Patent No: EP 0625896 B1 U.K. Patent No: EP 0625896 B1
Other U.S. and foreign patents pending.

©1992-9 RICON CORP.
All Rights Reserved
Printed in the
United States of America

This RICON product must be installed and serviced only by authorized RICON service agents.

The authorized RICON service agent must refer to this manual for installation instructions.

The owner must refer to this manual for operating instructions, then retain it for future reference by authorized RICON service agents who perform service and repairs.

Customer Name:_____
Installing Dealer:_____
Date Installed:_____
Serial Number:_____

REVISION RECORD

REV.	PAGE(S)	DESCRIPTION OF CHANGE	ECR / ECO
32DSST00.I 06/30/99	ii	Change "dealer" to "service agent".	002607/396 2
	1-1	Delete Canadian product support address.	
	1-2	Reorder warranty periods; change "dealer" to "service agent".	
	4-9 & 10	Update wiring diagram.	
	1-3	Update parts list.	
32DSST00. J 09/07/00	5-2	Update pump in drawing ssx00001, added bracket to drawing.	None
	Cover	Added U.S. patent number 5,944,473	4216
	5-2	Added third hydraulic spool assy to dwg ssx00001 (ref # 13-3 and 14-3).	2898/4250
	5-15	Part number 25382 is replaced with 17901	None
	5-24,27	Deleted pins 14322 and VT-PI-44, plus ring 14-31-075; added note****for pin kit 16679.	3201/4487
	4-3, 5	Changed hydraulic oil to Texaco 01554.	3215/
	5-4, 5	Added harness V2-SH-006, decal 32-10-154, and poppet valve V2-SH-177.	None
	5-23	Changed part #28325 to 15988 (Bag of ten).	None
	4-9, 10	Wiring diagrams redrawn to show second motor solenoid.	3343/4567
	5-33	Added data for S2009 model (derated)	None
END OF LIST			

TABLE OF CONTENTS

PAGE

I. INTRODUCTION	1-1
RICON 5-YEAR LIMITED WARRANTY	1-2
SHIPMENT INFORMATION.....	1-3
GENERAL SAFETY PRECAUTIONS	1-3
MAJOR LIFT COMPONENTS	1-4
II. INSTALLATION	2-1
A. MECHANICAL INSTALLATION	2-1
1. LIFT LOCATION	2-1
2. LIFT INSTALLATION GUIDELINES	2-1
3. LIFT INSTALLATION INTO VANS	2-2
4. LIFT INSTALLATION INTO BUSES	2-4
B. ELECTRICAL INSTALLATION	2-6
1. INSTALL MAIN CIRCUIT BREAKER	2-6
2. ROUTE/CONNECT MAIN POWER CABLE	2-7
3. GROUNDING INSTRUCTIONS	2-9
a. 12VDC Systems	2-9
b. 24VDC Systems	2-9
4. NON-RICON INTERLOCK DEVICE INSTALLATION	2-9
a. Interlock Method #1	2-10
b. Interlock Method #2	2-10
c. Interlock Method #3	2-11
C. FINAL ADJUSTMENTS	2-15
1. LIMIT SWITCH ADJUSTMENT	2-15
2. ROLLSTOP (PLATFORM TILT) ADJUSTMENT	2-17
3. TIE ROD ASSEMBLY INSTALLATION AND ADJUSTMENT	2-17
4. PLATFORM PRESSURE SWITCH CHECK AND ADJUSTMENT	2-18
5. PLATFORM LOAD SENSOR SWITCH ADJUSTMENT	2-19
D. VERIFY INSTALLATION	2-20
E. CUSTOMER ORIENTATION	2-20
III. OPERATING INSTRUCTIONS	3-1

A. SAFETY PRECAUTIONS	3-1
B. DAILY SAFETY CHECK	3-2
C. LIFT FUNCTIONS	3-3
D. CONTROLS AND INDICATORS	3-4
1. CONTROL PENDANT	3-4
2. ELECTRICAL CONTROLS AND INDICATORS	3-4
a. Interlock Indicator	3-4
b. Circuit Breaker for Optional Door Operator	3-5
c. Control System Circuit Breaker	3-5
d. Main Circuit Breaker	3-5
3. MANUAL BACKUP PUMP	3-5
E. LIFT OPERATION	3-6
1. ENTERING VEHICLE	3-6
2. EXITING VEHICLE	3-7
3. STOWING PLATFORM	3-7
4. MANUAL OPERATION	3-8
a. Deploy Platform	3-8
b. Lower Platform	3-9
c. Raise Platform	3-9
d. Stow Platform	3-9
F. MAINTENANCE AND REPAIR	3-9
IV. MAINTENANCE AND REPAIR	4-1
A. LUBRICATION	4-1
B. CLEANING	4-2
C. MAINTENANCE SCHEDULE	4-2
D. TROUBLESHOOTING	4-4
1. INTERLOCK INDICATOR DIAGNOSTICS	4-4
2. LIFT TROUBLESHOOTING	4-5
E. HYDRAULIC CIRCUIT DIAGRAM	4-6
F. ELECTRICAL WIRING DIAGRAMS	4-7
1. DIAGRAM LEGEND	4-7
a. Wire Color Codes	4-7

b. Electrical Connector Description	4-7
c. Diagram Labels	4-7
d. Electrical Symbols	4-8
2. S-SERIES™ LIMIT SWITCH STATE DESCRIPTION	4-8
3. WIRING DIAGRAMS	4-9
V. PARTS DIAGRAMS AND LISTS	5-1
APPENDIX 1. LIFT SPECIFICATIONS	5-33

LIST OF FIGURES**PAGE**

FIGURE [1-1]:	TRANSIT USE WHEELCHAIR LIFT	1-4
FIGURE [2-1]:	PLATFORM MOUNTING	2-1
FIGURE [2-2]:	FORD VAN CLAMPING BAR	2-2
FIGURE [2-3]:	STEPWELL BRACKET	2-2
FIGURE [2-4]:	BRACKET ASSEMBLY	2-3
FIGURE [2-5]:	VAN BASEPLATE HOLES	2-3
FIGURE [2-6]:	TOP BRACKET HOLE LOCATIONS	2-3
FIGURE [2-7]:	BUS CLAMPING BAR	2-5
FIGURE [2-8]:	BUS BASEPLATE HOLES	2-5
FIGURE [2-9]:	ELECTRICAL INSTALLATION DIAGRAM	2-6
FIGURE [2-10]:	POWER CABLE ACCESS HOLE	2-7
FIGURE [2-11]:	CABLE ROUTING	2-8
FIGURE [2-12]:	CONTROL INTERFACE AND STRAIN RELIEF KIT #1007	2-8
FIGURE [2-13]:	24VDC WIRING	2-9
FIGURE [2-14]:	INTERLOCK METHOD #1 DIAGRAM	2-12
FIGURE [2-15]:	INTERLOCK METHOD #2 DIAGRAM	2-13
FIGURE [2-16]:	INTERLOCK METHOD #3 DIAGRAM	2-14
FIGURE [2-17]:	LIMIT SWITCH ADJUSTMENT DIAGRAM	2-15
FIGURE [2-18]:	LIMIT SWITCH ADJUSTMENT CLEARANCE	2-15
FIGURE [2-19]:	PLATFORM SET SCREWS	2-17
FIGURE [2-20]:	ROD END INSTALLATION	2-17
FIGURE [2-21]:	PRESSURE SWITCHES AT FLOOR LEVEL	2-18
FIGURE [2-22]:	HYDRAULIC PUMP WITH PRESSURE SWITCHES	2-19
FIGURE [2-23]:	LOAD SENSOR SWITCH	2-19
FIGURE [2-24]:	DECAL LOCATIONS AND PART NUMBERS	2-21
FIGURE [3-1]:	DO NOT DEPLOY LIFT WHEN VEHICLE IS ON SLOPED GROUND	3-1
FIGURE [3-2]:	FACE OUTWARD	3-1
FIGURE [3-3]:	STAND CLEAR OF LIFT	3-2
FIGURE [3-4]:	PLATFORM POSITIONS	3-3

FIGURE [3-5]:	CONTROL PENDANT	3-4
FIGURE [3-6]:	INDICATOR LIGHT/CIRCUIT BREAKERS	3-4
FIGURE [3-7]:	MAIN CIRCUIT BREAKER	3-5
FIGURE [3-8]:	MANUAL BACKUP PUMP & HANDLE EXTENSION	3-5
FIGURE [3-9]:	MANUAL OPERATION	3-8
FIGURE [3-10]:	MANUAL BACK-UP PUMP - DEPLOY AND LOWER PLATFORM	3-8
FIGURE [3-11]:	MANUAL BACK-UP PUMP - RAISE PLATFORM	3-9
FIGURE [4-1]:	LIFT LUBRICATION POINTS	4-1
FIGURE [4-2]:	S-SERIES™ HYDRAULIC CIRCUIT DIAGRAM	4-6
FIGURE [4-3]:	MOLEX® CONNECTORS	4-7
FIGURE [4-4]:	DIAGRAM SYMBOLS	4-8
FIGURE [4-5]:	LIMIT SWITCH ACTUATION DIAGRAM	4-8
FIGURE [4-6]:	WIRING DIAGRAM FOR LIFT W/O DOOR OPERATOR	4-9
FIGURE [4-7]:	WIRING DIAGRAM FOR LIFT W/ DOOR OPERATOR	4-10
FIGURE [5-1]:	MONARCH HYDRAULIC POWER UNIT #1	5-2
FIGURE [5-2]:	MONARCH HYDRAULIC POWER UNIT #2	5-6
FIGURE [5-3]:	S-SERIES™ HYDRAULIC SYSTEM	5-8
FIGURE [5-4]:	S-SERIES™ HYDRAULIC SYSTEM WITH DRIP PAN	5-10
FIGURE [5-5]:	S-SERIES™ ELECTRICAL SYSTEM	5-12
FIGURE [5-6]:	S-SERIES™ PENDANT	5-14
FIGURE [5-7]:	S-SERIES™ SOLID PLATFORM	5-16
FIGURE [5-8]:	S-SERIES™ SPLIT PLATFORM	5-20
FIGURE [5-9]:	S-SERIES™ TRAVELING FRAME	5-24
FIGURE [5-10]:	S-SERIES™ TRANSIT HANDRAIL, S.N.'s 32000 & HIGHER	5-28
FIGURE [5-11]:	S-SERIES™ TRANSIT HANDRAIL, S.N.'s 49648 & HIGHER	5-30

LIST OF TABLES**PAGE**

TABLE [1-1]:	S-SERIES™ LIFT COMPONENT TERMINOLOGY	1-5
TABLE [2-1]:	LIMIT SWITCH ADJUSTMENT CHART	2-16
TABLE [3-1]:	LIFT FUNCTIONS	3-3
TABLE [4-1]:	MAINTENANCE SCHEDULE	4-2
TABLE [4-2]:	INTERLOCK INDICATOR TROUBLESHOOTING GUIDE	4-4
TABLE [4-3]:	LIFT OPERATIONAL TROUBLESHOOTING GUIDE	4-5
TABLE [4-4]:	WIRE COLOR CODES	4-7

-Go to next chapter-